

User Guide

Braven Braai Oven

BRAVEN™

Braai Oven

Portable and Collapsible

PATENT PENDING



- ✓ Pizzas
- ✓ Roasts & Ribs
- ✓ Oven Bakes
- ✓ Fish & Chicken
- ✓ Breads

Ideal for camping or home use

Stainless Steel
5 Year Warranty

Limited Offer Included FREE!

- *Pizza Peel*
- *Temperature Gauge*




PARTS LIST

- 1 Bottom plate
- 2 Carry handles
- 3 Tray
- 4 Left side plate
- 5 Right side plate
- 6 Back plate
- 7 Front plate (door)
- 8 Top plate
- 9 Key


Optional extras:

- 10 Pizza peel
- 11 Thermometer


Carry bag

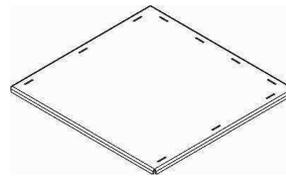


1

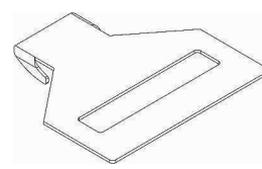


2

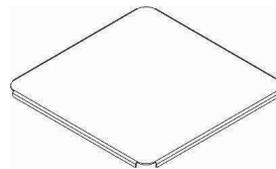


3

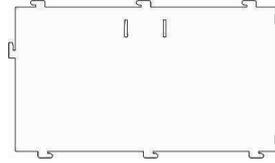

4

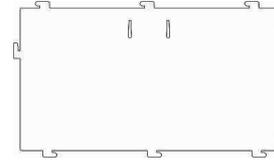


5

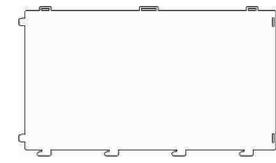

6




7

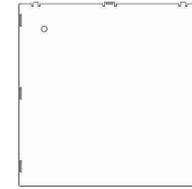

8



9

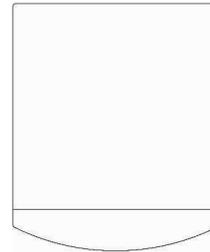


10




11

Assembly


- 1 Place the bottom plate on a flat surface with the number 1 in the left side corner.
- 2 Match number 1 on the bottom plate with number 1 on the left side plate. Fit left side plate hooks into the bottom plate slots and move the plate back until it cannot move any further.
- 3 Match number 2 on the bottom plate with number 2 on the back plate. Fit back plate hooks into the bottom plate slots and move the back plate left until it cannot move further making sure the top and bottom tag align and fit into the left plate slots.
- 4 Match number 3 on the bottom plate with number 3 on the right side plate. Fit right side plate hooks into the bottom plate slots and move the plate back until it cannot move further making sure the top and bottom tag align and fit into the back plate slots.
- 5 Fit the temperature gauge through the hole near the top left of the top plate and secure it with the nut. Now align and lower the top plate above the already fitted plates. The hooks from the left and right plate must protrude through the top plates left and right side slots. Now move the top plate back until the tags slide under the back plates slots and until it cannot move any further.
- 6 Place the tray inside the assembled oven and then fit the front door onto the left and right side hooks. The key **MUST** now be fitted into the back plates centre slot to ensure safety and to maintain the box shape.

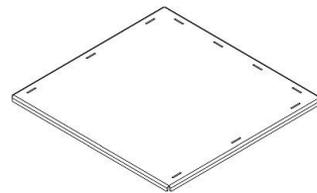


1

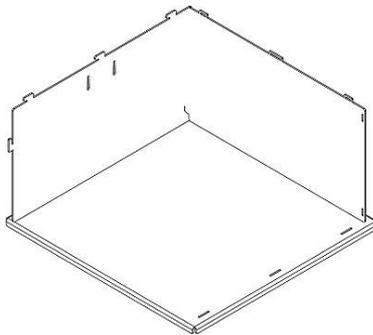


3

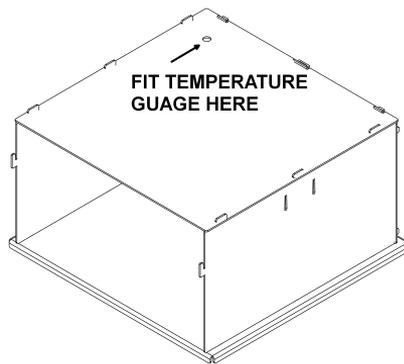


5

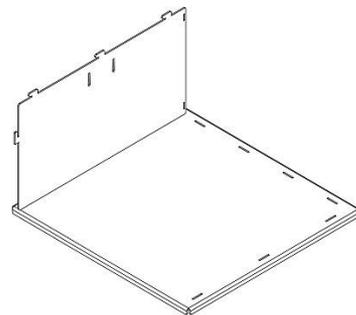

2

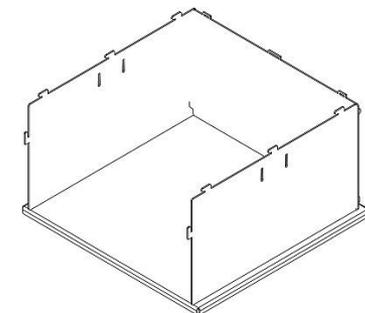

4

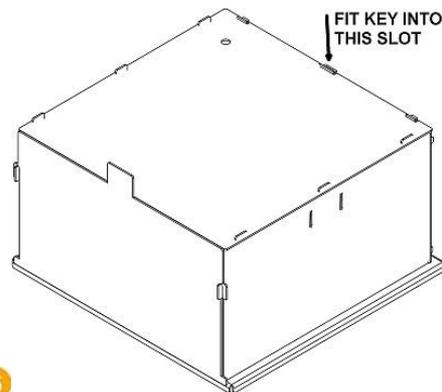


6

How To Use

- 1 Fully assemble the Braven and prepare a fire using wood or charcoal. Gas may also be used to heat the oven.
- 2 Place the Braven on a grill or raise it above the flames (bricks work well). Ensure that the Braven is not placed directly on burning charcoal or wood, as damage to the steel may occur. Spread the coals evenly underneath the oven to ensure even heat distribution - especially when cooking pizzas.
- 3 Insert a handle into the left plate side slots and one into the right plate side slots should you wish to carry the oven when hot. Ensure the handles are inserted correctly - they must slide all the way up into the receiving slots or the oven may fall.
- 4 **Disassembly:** when cooking is complete, allow time for the Braven to cool down first before attempting to dismantle it. When hot, the Braven metal expands and it may be more difficult to release the parts from the slots. The procedure to dismantle is the reverse of the assembly...
1 - remove key, 2 - remove front door, 3 - remove top plate
4 - remove right plate, 5 - remove back plate, 6 - remove left plate
- 5 The parts may now be cleaned if desired and are dishwasher safe. Clean with household dish detergent and rinse thoroughly. **METAL SCOURERS or scrapers (like steel wool) must never be used.** The carry bag is also hand washable in cold water.

3

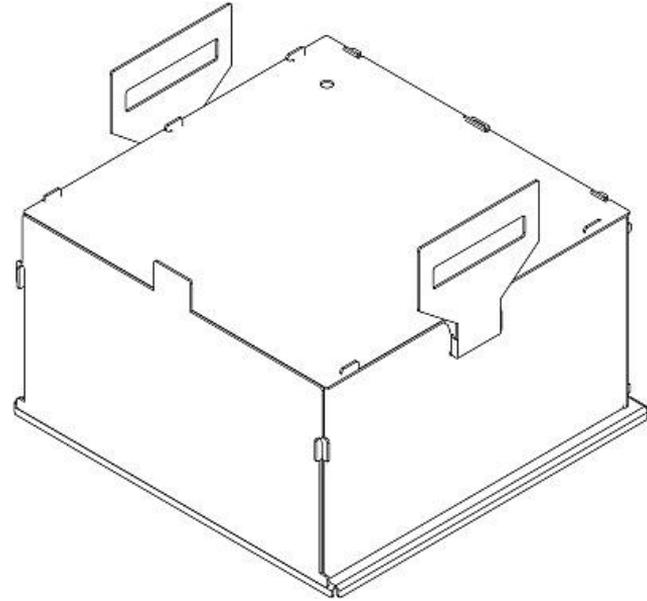

Cooking with the Braven

Once your desired temperature is reached, open the Braven front door using a glove or tongs and then place your food into the oven. Refit the door and monitor the temperature to ensure desired cooking results.

TIP: Place cooked food in a dish on top of the Braven to keep it warm, until you are ready to eat. Alternatively, take the Braven off its direct heat source and place it nearby the heat and then place your food inside the oven.

- 1 Pizza:** Sprinkle some flour or semolina on the tray to prevent sticking and place the pizza on it using a pizza peel or similar item.
- 2 Roasts (meats & vegetables):** Use the Braven the same as you would use a kitchen oven to cook your favourite roast meals. Roast chicken, potato bake, roast vegetables etcetera. Make sure you use oven safe dishes.
- 3 Fried eggs, bacon, sausage or similar:** Remove the front door, key and top plate. Cook directly on the tray or invert it to help prevent food from falling off the sides.
DO NOT use the handles to carry the Braven when the top plate is removed.
- 4 Breads, quiches, potatoes etc.:** Foods wrapped in tin foil can be placed inside the Braven to cook quickly or placed on top to cook slowly (e.g. garlic bread).



Important Notices

- 1) Parts may be tight fitting initially but will ease with use.
- 2) Parts may show some scratch marks resulting from movement during transport or from the manufacturing process itself, and this will in no way affect the performance of the oven.
- 3) A nice golden brown shade and some warping of the steel parts is normal after use, and characteristic of the stainless steel.
- 4) Dismantle and pack in the carry bag only once the oven is cool.
- 5) The Braven must not be placed directly on burning charcoal or wood as damage to the steel may occur.
- 6) Do not use the handles to carry the Braven when the top plate is removed.

Specifications:

Mass: 9.8kg

Dimensions: 350mm (L) x 340mm (W) x 202mm (H)

Dimensions - pizza tray: 320mm (L) x 320mm (W) x 12mm (H)

Material: 3CR12 Stainless Steel | **Thickness:** 2mm

Manufactured by:



Proudly manufactured in South Africa

5 Year Warranty

Braven Stainless Steel Braai Ovens are an investment that will last many years. We design our ovens to the highest quality standards for top performance and cooking results. We are proud of our Bravens and stand behind all our products by offering this long term warranty.

Warranty Highlights

- Braven pays for shipping warranted replacement parts and also pays for shipping warranted defective parts back to the factory.
- Limited to the repair or replacement of steel parts only which prove to be defective under normal domestic use. The Braven should therefore not be left outdoors exposed to the elements for long periods of time, and best stored indoors in its protective carry bag.
- There is NO LABOUR warranty as all the parts are easily assembled by the user.
- This warranty is extended only to the original purchaser as indicated on the proof of purchase receipt. It applies only to products sold through retail or online stores and only when used exclusively by the purchaser in the country purchased.
- Braven support is normally open 5 days a week to assist with any questions, installation, service and setup queries.

Warranty Term

Braven stainless steel ovens are under warranty for a period of FIVE YEARS from the date of purchase. Proof of purchase is required to submit a warranty claim.

Warranty Exclusions

Any failures or operating difficulties due to accident, abuse, misuse, alteration, misapplication, vandalism, improper installation or improper maintenance or service, or failure to perform normal and routine maintenance. Deterioration or damage due to severe weather conditions, scratching, discoloration (except from normal use which is expected), exposure to chemicals or chemical residues. Contamination from other materials especially other metals (like steel wool), warping (unless assembly is difficult or impossible), and normal wear and tear based on the properties of the steel.